

【Connect a fiber cable】

1: Prepare the following items

- SFP fiber module Set
- Fiber cable(1m,3m,20m)
- ※ Select the cable according to the installation environment.
- Switching hub with SFP slot(Not included)



2: Insert the SFP module into the SFP slot



3: Connect the fiber cable




4: Connect the same at the switching hub side



5: Precaution when removing

When removing the fiber cable, be sure to hold the yellow circle in the figure below and pull it out.

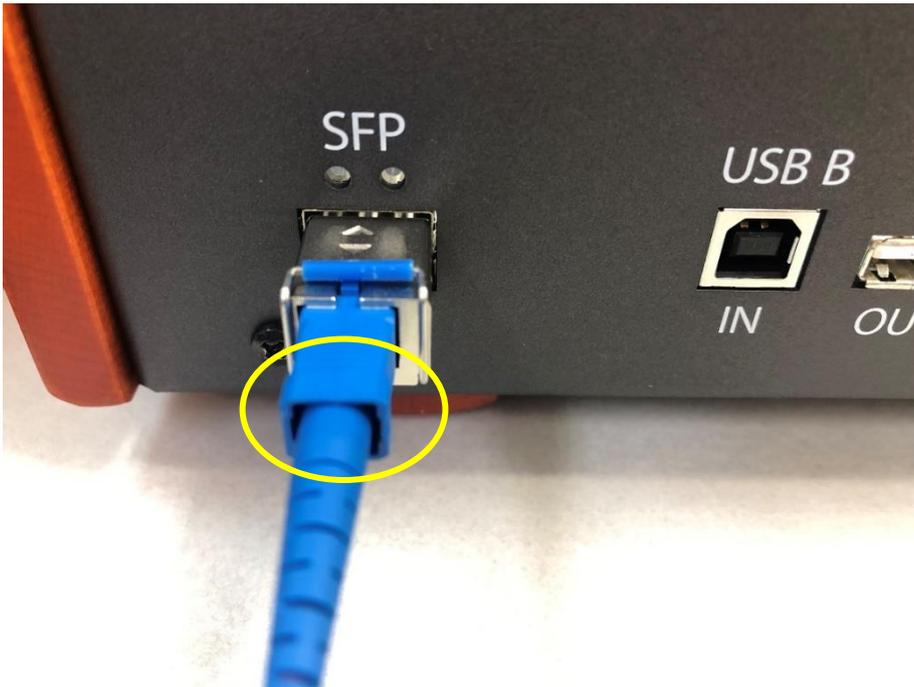

After disconnecting the fiber cable, lower the lever of SFP module as shown below and pull it out.



【Connect a LAN cable】

1: Install SFP Copper module



2: Insert the SFP Copper module into the SFP slot



3: Connect the LAN cable



4: Remove the SFP Copper module

After disconnecting the LAN cable, lower the lever of SFP Copper module as shown below and pull it out.

