

SPEC



DESIGNER AUDIO

STEREO POWER AMPLIFIER

RPA-MG3000

Operation Manual

Read through this operation manual before use so you will know how to operate your model properly. After you have finished reading the manual, put it in a safe place for future reference.

Safety Precautions



AVIS: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR.



THIS SYMBOL IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCTS ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THIS SYMBOL IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE UNIT.

WARNING

Exposure to extremely high noise levels may cause a permanent hearing loss. Individuals vary considerably to noise induced hearing loss but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a sufficient time.

Operating Environment

Operating environment temperature and humidity: +5 °C to +35 °C (+41 °F to +95 °F); less than 85 %RH (cooling vents not blocked)

Do not install this unit in a poorly ventilated area, or in locations exposed to high humidity or direct sunlight (or strong artificial light)

WARNING

This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near this equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.

POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause fire or give you an electrical shock.

Check the power cord once in a while.

European model only



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electric products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, in Switzerland and Norway may return their used electric products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For countries not mentioned above, please contact your local authorities for the correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

Contents

Chapter 1 Introduction

Check included items	4
Installing this product	4
Regarding installation	4

Chapter 2 Connections

Connections diagram	5
How to connect the speaker cords	8
How to connect XLR cables	8
How to connect audio cords	9
How to connect the power cord	9

Chapter 3 Part Names

Front panel	10
Rear panel	11

Chapter 4 How to Operate

Playback steps	13
----------------------	----

Chapter 5 Other

Troubleshooting	14
Care and maintenance	14
Specifications	15
Warranty and after sales service	16

Check included items

- Power cord × 1
- DC cord (MAIN) × 1
- DC cord (SUB) × 1
- Mini plug connection cable
- Operation manual (this book)

Installing this product

- Be sure to install this product on a flat, stable surface.
- Do not install this product in the following locations:
 - On top of a television (the image may warp)
 - Near a cassette deck or other magnetism emitting device (the audio may be adversely affected)
 - In a location hit by direct sunlight
 - In a moist location
 - In high or low temperature locations
 - In a location with vibration
 - In a location with much dust or tobacco smoke
 - In kitchens or other locations where fumes are emitted and oil is used

Regarding installation



Caution

- Never place items on top of this product, cover it with a sheet, or use it when its heat radiation is obstructed. Abnormally high temperatures may damage the product.




Connections diagram

⚠ Important

- When connecting devices or making changes, be sure to turn the POWER switch OFF and disconnect the power cord from the electrical outlet. Plug in the power cord last.
- If an extremely loud signal is input to this product, there is a danger that noise will be generated and cause damage. In such a case, lower the input signal level.
- Use only the included DC cords for the connection between the amplifier and power supply. Do not use any other cords. Be careful not to mistake the MAIN DC cord and the SUB DC cord.

■ When STEREO mode


- Set the [8] SPEAKERS selector switch to [STEREO]. (→ page 12)
- When a playback device is directly connected to the product, the volume of the product can be adjusted by connecting the volume controller (H-VC5 or H-VC1000) (sold separately) to the SPEC-VOL CONT terminal. Set the [3] GAIN selector switch to [SPEC-VOL]. (→ page 12)
- When a control amplifier is connected to the product, set the [3] GAIN selector switch to [MAX] or [-6 dB]. (→ page 12)

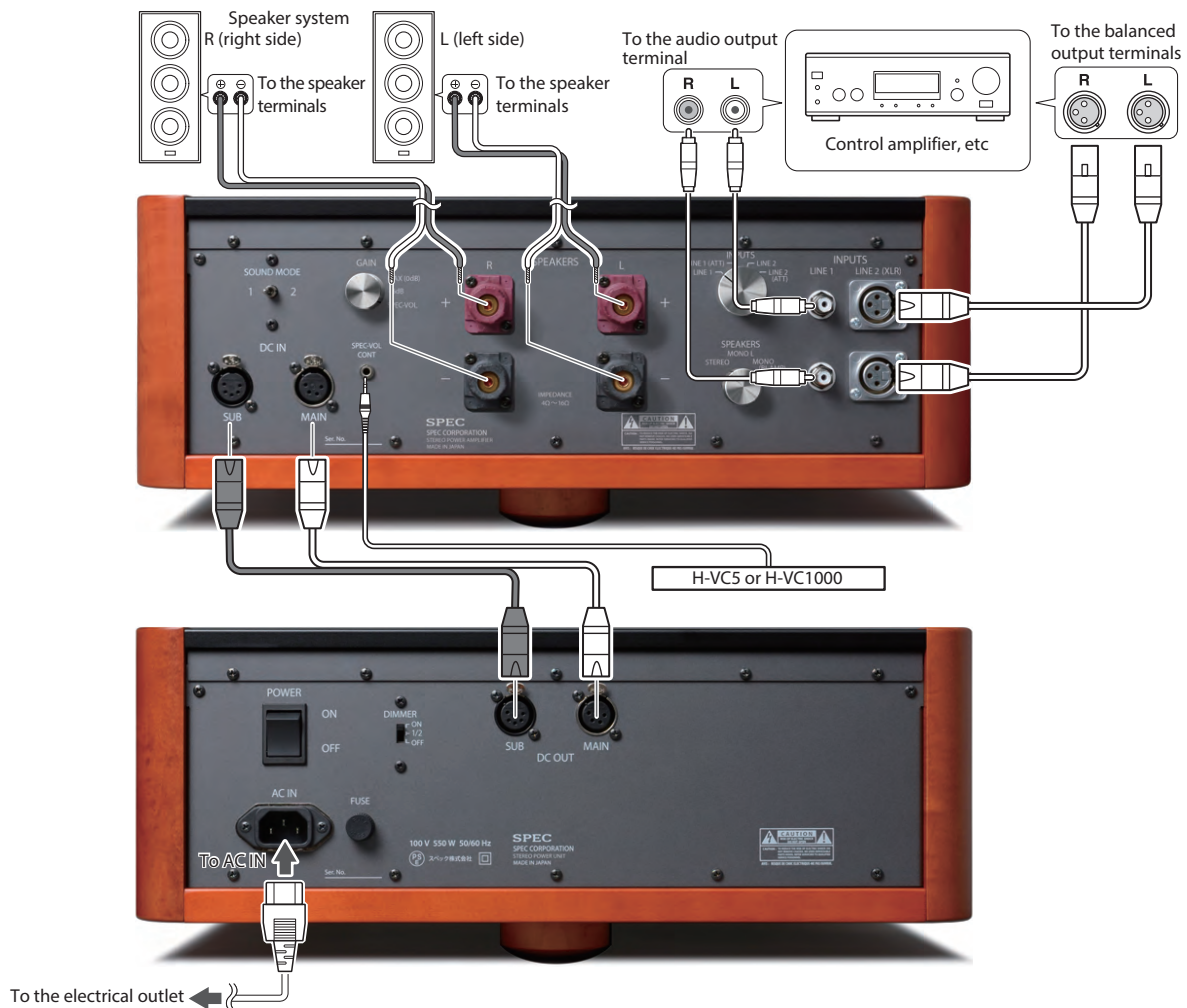

- Depending on the Control amplifier used, there may be a caution regarding simultaneously connecting RCA and XLR, so refer to the operation manual of the respective Control amplifier.

■ When MONO mode (mono connection)


- Set the **[8]** SPEAKERS selector switch to [MONO L]. (→ page 12)
- When a playback device is directly connected to the product, the volume of the product can be adjusted by connecting the volume controller (H-VC5 or H-VC1000) (sold separately) to the SPEC-VOL CONT terminal. Set the **[3]** GAIN selector switch to [SPEC-VOL]. (→ page 12)
- When a control amplifier is connected to the product, set the **[3]** GAIN selector switch to [MAX] or [-6 dB]. (→ page 12)
- For this connection, always connect a speaker to the speaker L terminal. No sound will be output from the speaker R terminal.

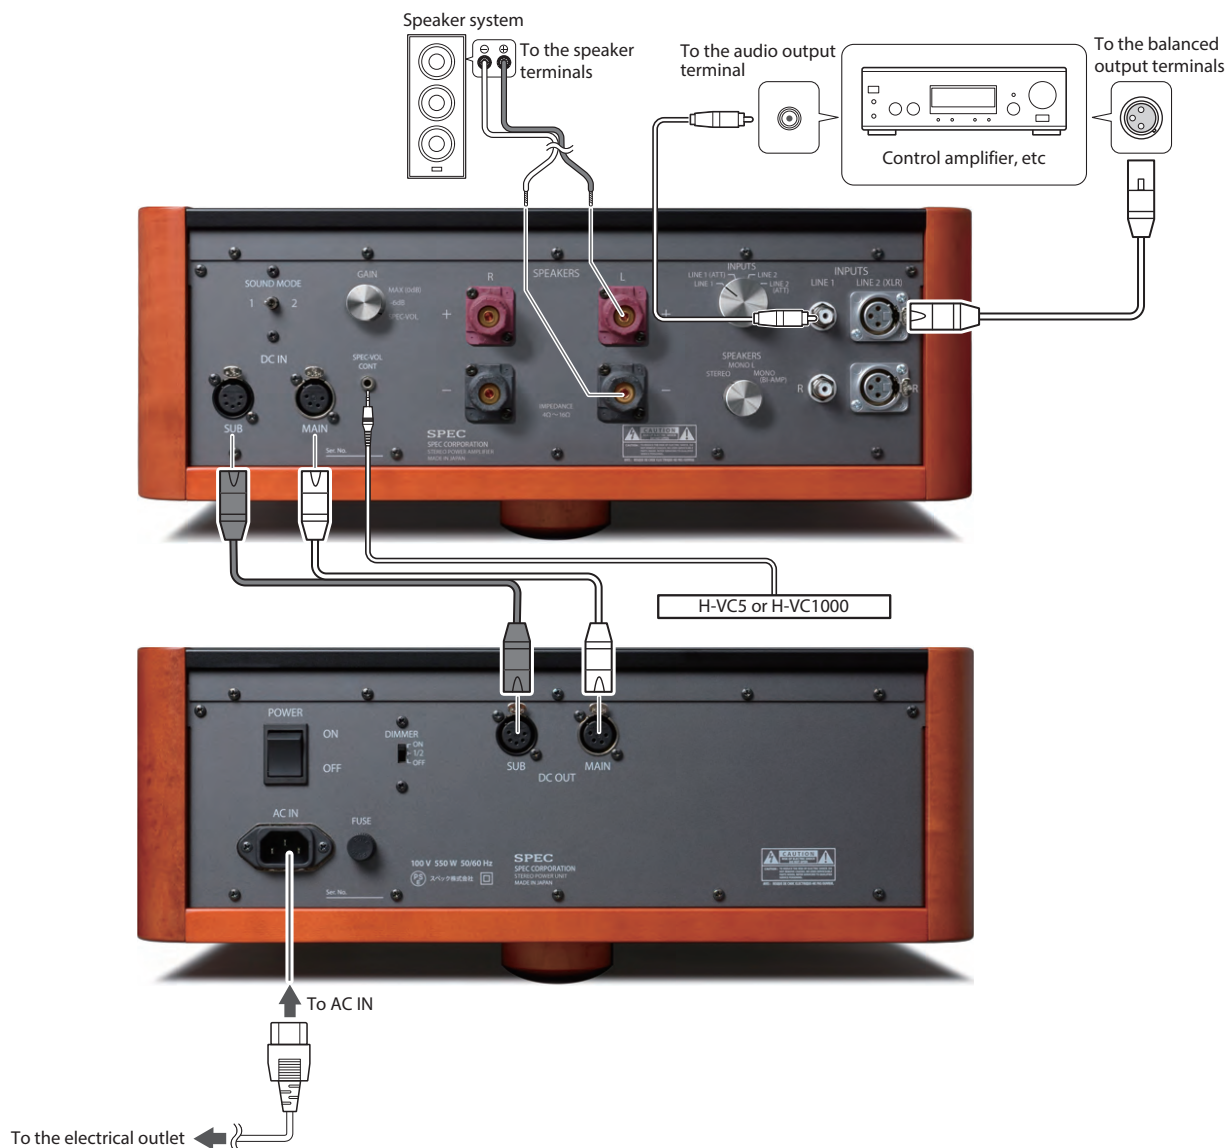

* Depending on the control amplifier used, there may be a caution regarding simultaneously connecting RCA and XLR, so refer to the operation manual of the respective control amplifier.

■ When MONO x 2 mode (bi-amplifier connection)

- Set the [8] SPEAKERS selector switch to [MONO (BI-AMP)]. (→ page 12)
- When a playback device is directly connected to the product, the volume of the product can be adjusted by connecting the volume controller (H-VC5 or H-VC1000) (sold separately) to the SPEC-VOL CONT terminal. Set the [3] GAIN selector switch to [SPEC-VOL]. (→ page 12)
- When a control amplifier is connected to the product, set the [3] GAIN selector switch to [MAX] or [-6 dB]. (→ page 12)

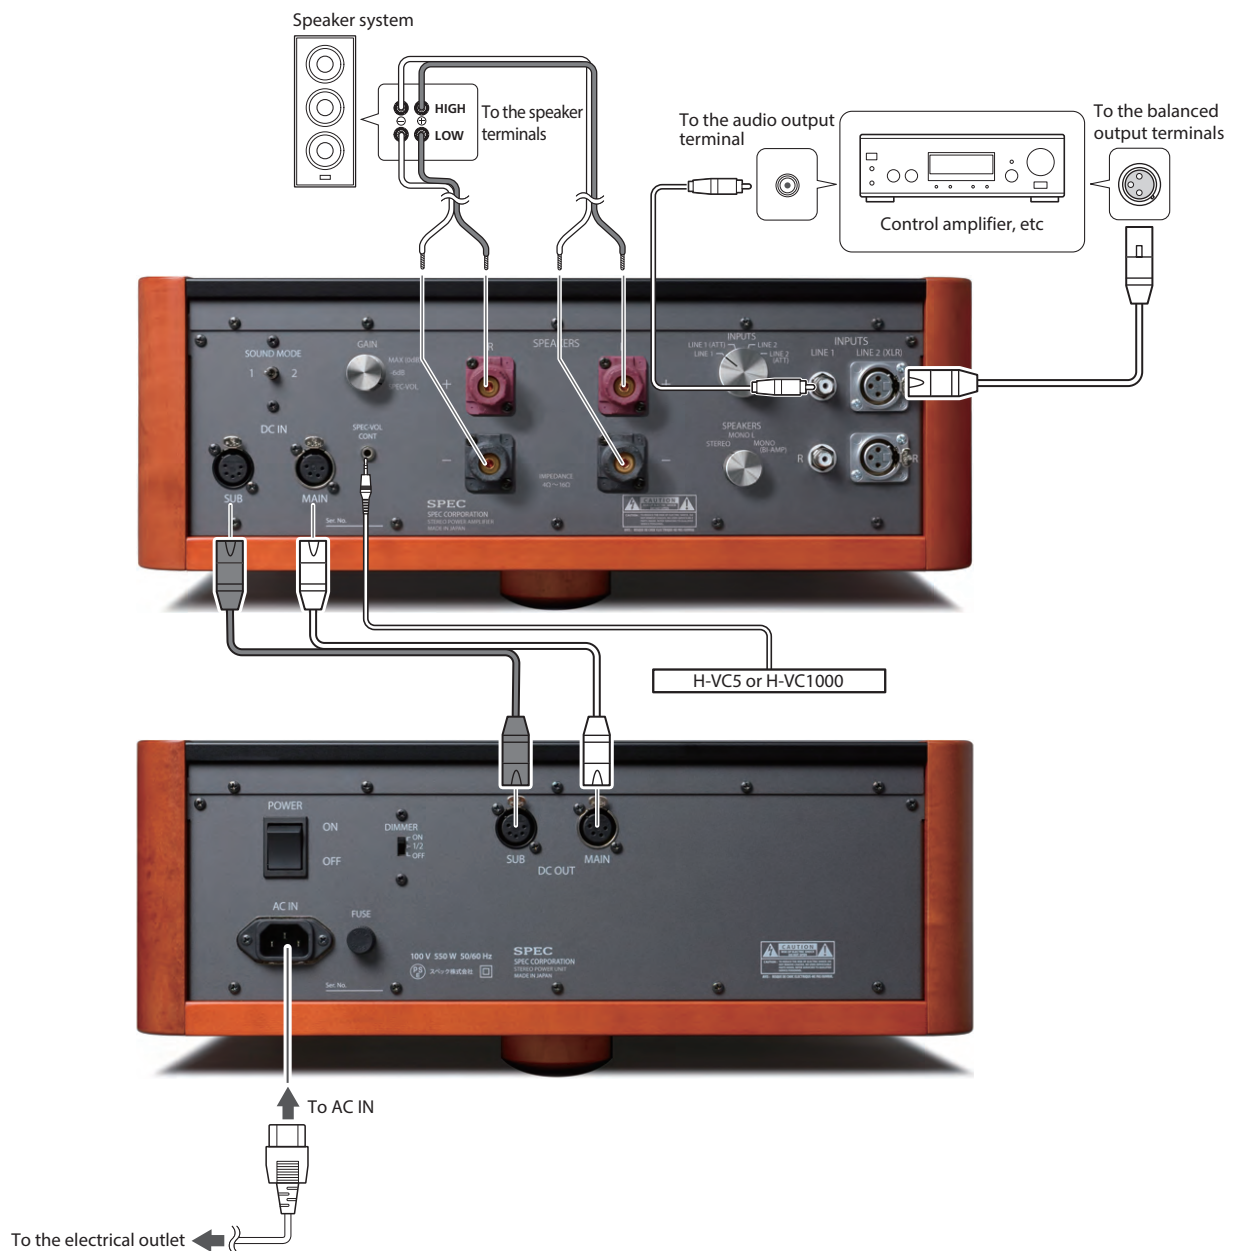


* Depending on the control amplifier used, there may be a caution regarding simultaneously connecting RCA and XLR, so refer to the operation manual of the respective control amplifier.


How to connect the speaker cords

The connection terminals are red for positive (+) and black for negative (-).

- 1 Twist the wire.**
- 2 Loosen the speaker terminal, and insert the speaker cord.**
- 3 Once the speaker cord is inserted, tighten and secure the speaker terminal.**

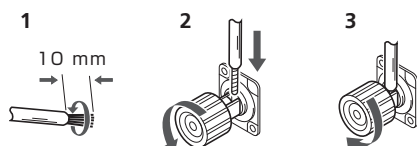

The connection terminals on this product are also compatible with Y lug terminals and banana plugs.

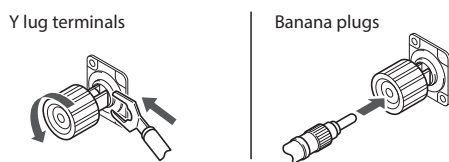


Caution

- Use speakers with nominal impedance of $4\ \Omega$ to $16\ \Omega$.
- Connect accurately the + and - terminals between the speakers and this product.
- Do not allow unshielded center wire from the terminals to stick out and make contact with each other. If the center wires touch the device may break.
- Use sufficient current capacity speaker cord and be sure to make connections that are not loose and do not short. Using low current capacity connecting cords or making imperfect connections may affect playback audio and can cause overheating or short circuits.
- High voltage is output from the speaker terminals. To avoid the danger of electrical shock, be sure to unplug the power cord before making speaker connections.


How to connect XLR cables

Connect the balanced output terminal on the device to the XLR input terminal on the product.

Match the orientation of the XLR plug to the XLR input terminal on the product, and then push the XLR plug into the XLR input terminal until a click is heard.

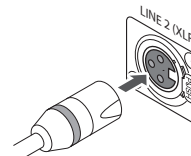


When disconnecting an XLR plug, press the latch lever (the part with "PUSH" inscribed on it) while pulling the cable. Use caution, as forceful disconnection may damage the unit.

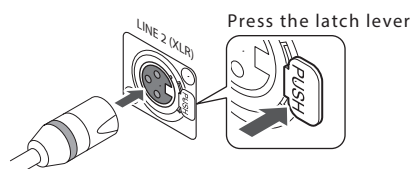

Note

 - The pin positioning of the XLR input terminal of this product is depicted below. Confirm that the product to be connected is compatible with the pin positioning of this product. For further details, consult the operation manual included with the product to be connected.




- The balanced output signal level of the source device (CD player, DA converter, etc.) may be significantly larger than the RCA unbalanced output, depending on the device. For this reason, the signal level of balanced input on the product is dropped approximately 3 dB lower than the RCA unbalanced input. Depending on the connected device, playback may occur at a volume lower than a device with an RCA unbalanced connection, but this is normal and not a malfunction.

How to connect audio cords

Connect the RCA output terminal on the device to the RCA input terminal on the product.

How to connect the power cord

Once all connections have been made, connect the included power cord to the AC IN terminal of this product and to the residential electrical outlet. Press firmly to push the plug all the way in.

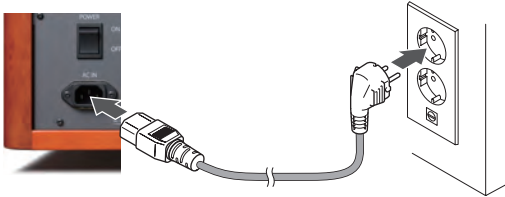

* The plug type varies according to the region.


Caution

- The power cord for this product is removable, but please refrain from using power cords other than the cord included (3P plug-in socket type with electrical current capacity: 7 A).

Note

- When not using this product for extended periods, be sure to turn the POWER switch OFF or unplug the power cord from the electrical outlet.
- Turn the POWER switch OFF before unplugging the power cord.
- The power consumption of this product varies greatly depending on the volume level of the playback audio signal. For satisfactory music playback, connect to an electrical outlet with sufficient capacity. (Connecting to a low capacity electrical outlet creates the danger that the connection will overheat.)
- If the residential power supply is cut off due to a power outage, the state of this product will be as follows when power is restored.
 - If the POWER switch is ON when power is restored
 - The product returns to its state prior to power restoration.
 - If the POWER switch is OFF when power is restored
 - The product is in the normal power OFF state.

Front panel

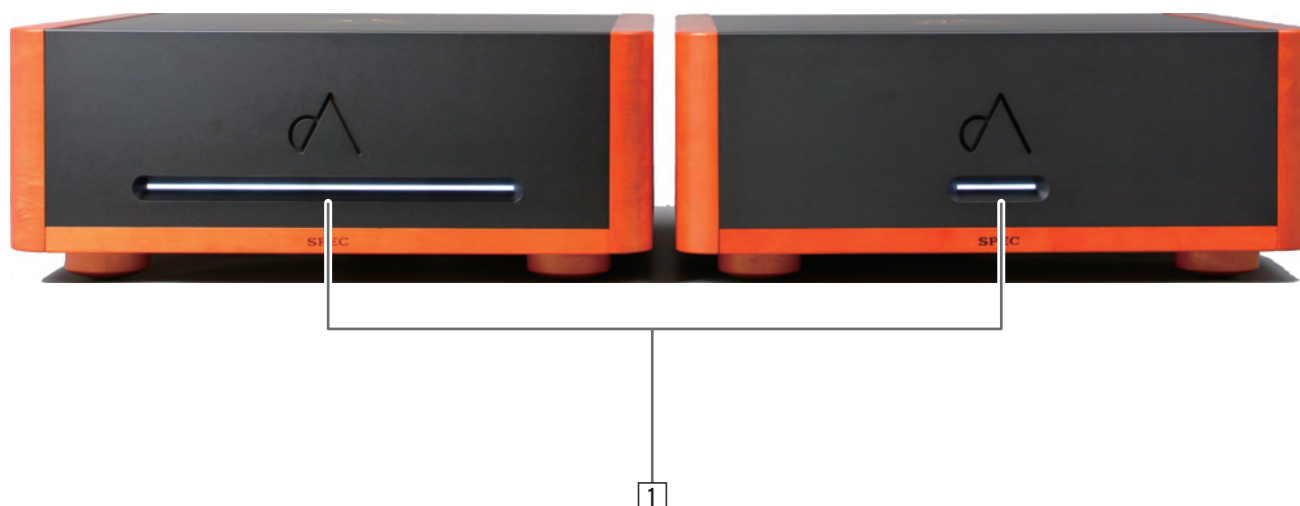

1 ON indicator

Lit when the product power is turned on.

Change the illumination type by setting the DIMMER switch.

(→ page 11)

Rear panel**Power supply****1 POWER switch**

Turns power ON and OFF.

2 AC IN terminal

Connect the included power cord. (→ pages 5 to 7, 9)

3 Fuse

The fuse may break if something abnormal occurs to the product. Contact us if the fuse breaks. (→ page 16)

4 DIMMER switch

Changes the illumination type of the ON indicator on the front of the product. (For both the power supply and amplifier)

ON : Lit in white light.


1/2 : Lit using white light. Slightly dimmer than ON.

OFF: Only the center of the ON indicator is lit using warm yellow light.

**5 DC OUT terminals**

Connect the power supply to the amplifier using the included dedicated cables.

■ **Amplifier**

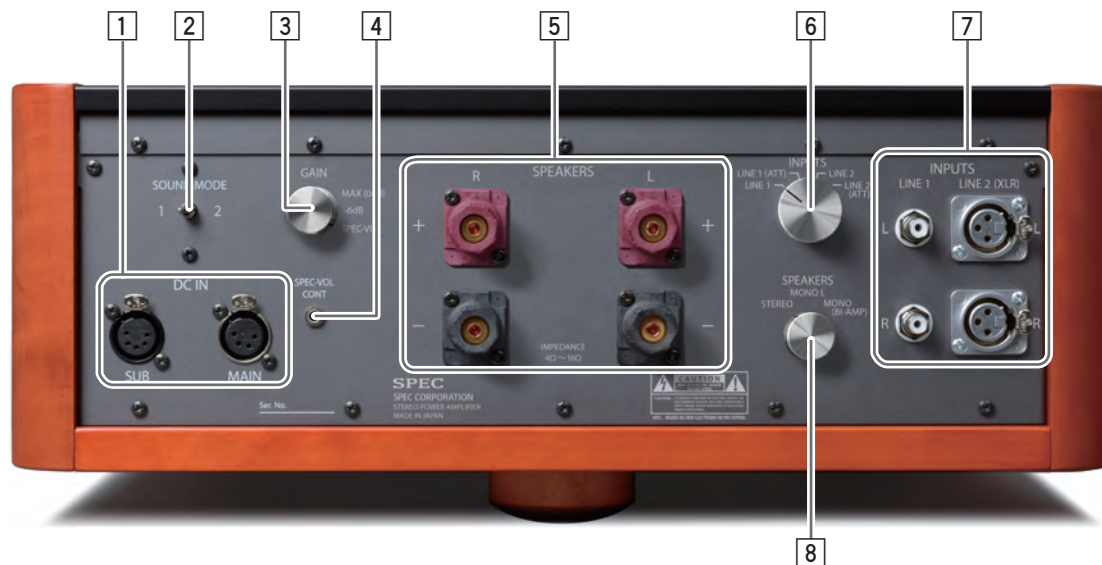

1 DC IN terminals

Connect the amplifier to the power supply. (Using the dedicated cables.)

2 SOUND MODE selector switch

Changes the sound quality. Set the sound quality as desired.

3 GAIN selector switch

Switches the output gain of this product.

MAX : Select this setting when using a preamp. Switches the setting to the rated output.

-6 dB : Switches the setting to the rated output minus 6 dB.

SPEC-VOL : Select this setting when using the volume controller (H-VC5 or H-VC1000).

4 SPEC-VOL CONT terminal

Connect the volume controller (H-VC5 or H-VC1000).

5 Speaker terminal

6 INPUT selector switch

Switch the input terminals of this product.

LINE 1 : Set this when the device connected to this product is connected to the RCA terminals.

LINE 1 (ATT) : Set this when the device connected to this product and you hear distortion due to, for example, excessive input. This reduces the level of the input signal by approximately 6 dB.

LINE 2 : Set this when the device connected to this product is connected to the XLR terminals.

LINE 2 (ATT) : Set this when the device connected to this product and you hear distortion due to, for example, excessive input. This reduces the level of the input signal by approximately 6 dB.

7 Audio input terminals (→ pages 5 to 7)

LINE 1 : RCA-type input terminal.

LINE 2 : XLR-type input terminal (female).

8 SPEAKER selector switch

Switches the mode for the connection between this product and the speakers.

STEREO : Set this for use with an ordinary stereo (driving of both the L and R channels) connection. (→ page 5)

MONO L, MONO (BI-AMP)

: Set this to use this product as a mono amplifier. Input the INPUTS to the L channel. (→ pages 6 to 7)

Playback steps



- 1 Turn on the power of the playback device.
- 2 Confirm that the volume of the device connected to the product is set to its lowest setting, and then turn on the power of the product.

Check that the ON indicator on the body front panel is lit.

Troubleshooting

If you think this product may be broken, check the following troubleshooting items. Some minor operational errors can make the product appear to be broken.

Potential causes other than this product should also be considered. Check the other devices being used as well as all simultaneously operated electrical devices. If the following instructions do not help even on multiple inspections, contact us. (→ page 16)

Issue	Cause/Treatment	Reference
The power does not turn on.	<ul style="list-style-type: none"> Is the power plug disconnected from the electrical outlet? → Correctly insert the power plug into the outlet. 	page 9
	<ul style="list-style-type: none"> Is the power plug disconnected from the AC IN terminal? → Correctly insert the power plug. 	page 9
	<ul style="list-style-type: none"> If the power will not turn on even with correctly connecting the power plug, the fuse may be broken. → Contact us for consultation. 	page 16
There is no sound.	<ul style="list-style-type: none"> Is the connecting cord disconnected from the terminal, or connected incorrectly? → Correctly connect the cord. 	pages 5 to 9
	<ul style="list-style-type: none"> Is the speaker cord disconnected from the terminal, or connected incorrectly? → Correctly connect the speaker cord. 	pages 5 to 8
	<ul style="list-style-type: none"> Is the terminal or connecting cord pin plug dirty? → Wipe clean the terminal or plug. 	–
	<ul style="list-style-type: none"> Is the GAIN selector switch of this product set to SPEC-VOL? → Set it to the MAX or -6dB position. 	page 12
Sound comes out of the speakers even after turning off this product.	<ul style="list-style-type: none"> Immediately after turning off the power, sound may come out of the speakers while the ON indicator is lit, but this is not a sign of breakage. → When playback is finished, first turn the volume of the device connected to the product all the way down and then shut off the power of this product. 	–
The volume is low.	<ul style="list-style-type: none"> Is the GAIN selector switch set to -6 dB? → Set it to MAX. 	page 12



Note

The product may not function properly due to external factors, such as static electricity. In this case, the product may once again function properly if the power cord is unplugged and then plugged in again. If this does not solve the problem, please contact SPEC CORPORATION.

Care and maintenance

For daily maintenance, use a polishing cloth to lightly wipe the front panel of this product. If it is very dirty, use a soft cloth moistened with neutral detergent watered down to 1/5-1/6 concentration and wipe off the dirt, then wipe dry with a dry cloth.

If alcohol, thinner, petroleum ether or insecticide adhere to the front panel it may be damaged, so use caution. Whenever using pre-moistened wipe, be sure to completely read the warning instructions that come with the wipe.

Natural wood is used for the side panels and bottom panels of the product. Do not place it in direct sunlight or near a heater. The front panel may become discolored, and the product may be warped due to the natural wood contracting.

Specifications

■ Amplifier

Maximum output	300 W × 2 (4 Ω)
Frequency response	10 Hz - 30 kHz ±1 dB (6 Ω, 1 W)
Line input terminal	XLR input: 1 RCA unbalanced input: 1
Speaker terminal	1
External dimensions	450 mm (width) × 180 mm (height) × 455 mm (depth)
Weight	18.0 kg

■ Power supply, other

Power voltage	110, 120, 220, 230, 240 V AC, 50 Hz/60 Hz
Electrical consumption	With no signal: 16 W, during maximum output: 550 W
External dimensions	450 mm (width) × 180 mm (height) × 440 mm (depth)
Weight	27.0 kg

■ Included items

Power cord	1
DC cord (MAIN)	1
DC cord (SUB)	1
Mini plug connection cable	1
Operation manual (this book)	1

* Due to improvements the above specifications and external appearance may be changed without notice.

Warranty and after sales service

About Warranty

Make sure that the name of your distributor and the date of purchase are written in the warranty. Read it carefully, and then keep it in a secure location. The warranty is valid for one year from the date of purchase.

Malfunctions

If the product malfunctions in the course of normal use (use in accordance with the manual and safety precautions) during the warranty period, then we will repair the product free of charge. When you bring your product to the distributor for servicing, be sure to bring the warranty with you. See the guarantees in your warranty for details. We will repair malfunctions occurring after the warranty period has expired for a fee, in accordance with our servicing regulations.

Please note that we cannot provide any warranty or bear any liability for damage to any equipment that is connected to the unit resulting from incorrect use.

Contact Information

SPEC CORPORATION

TEL: +81-3-3660-0303

FAX: +81-3-3660-0333

E-mail: info-ex@spec-corp.co.jp

URL: spec-corp.co.jp

Terms of Warranty

1. If this product malfunctions during use in accordance with the manual, and during the warranty period, then please bring the product and this warranty to the store where you purchased it. It will be repaired free of charge.
2. If you cannot ask the store where you purchased it for repairs (e.g. if you have moved or the product was a gift), please consult with SPEC CORPORATION.
3. A fee will be charged for repairs in the following circumstances, even if it is during the warranty period.
 - (A) The product malfunctioned or was damaged due to user error or unauthorized repair or modification
 - (B) The product malfunctioned or was damaged due to dropping, etc. after purchase
 - (C) The product malfunctioned or was damaged due to fire, flooding, lightning and other weather phenomena, pollution, salt damage, or the like
 - (D) The product malfunctioned or was damaged due to other than normal use, such as long hours of continuous commercial use
 - (E) The main unit has been disassembled
 - (F) The text of the warranty has been changed or overwritten
 - (G) The malfunction was caused by another company's product
4. This warranty cannot be re-issued. Store it in a safe place, and do not lose it.

WARRANTY

RPA-MG3000 STEREO POWER AMPLIFIER

Name	Telephone ()
Address	
Date of Purchase	Distributor Name & Telephone
Warranty Period (Main Unit Only) One Year from Date of Purchase	

SPEC

SPEC CORPORATION

4th FL.NIHOMBASHI NAKAYA BUILDING,12-12 NIHOMBASHI-
KOBUNA-CHO,CHUO-KU,TOKYO 103-0024,JAPAN

© SPEC 2020